



NOTE: Your components and connection locations may vary by model.

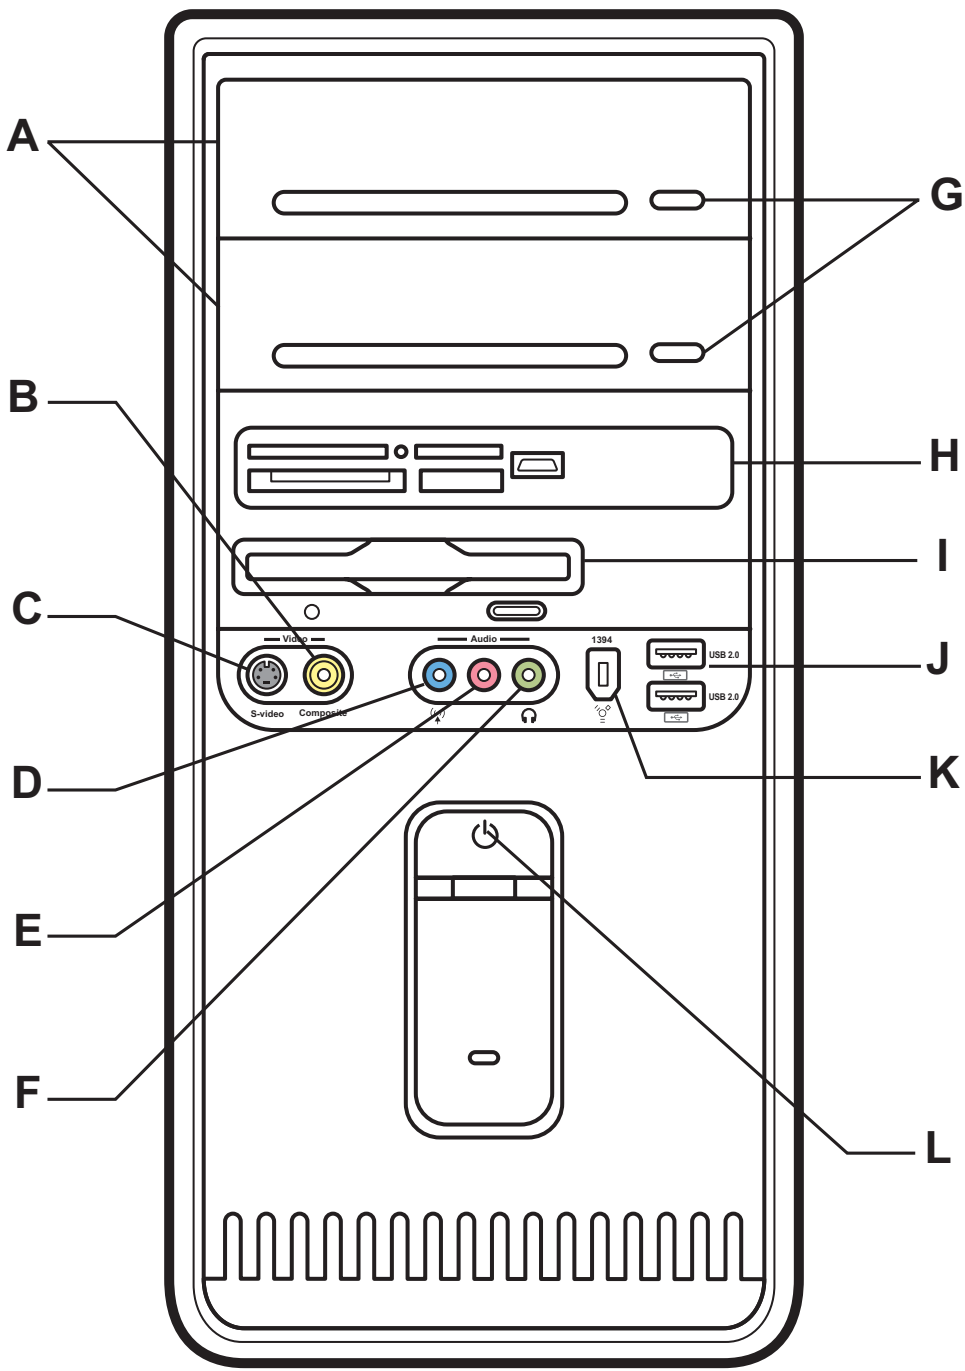

- A — Optical drives
- B — Composite video
- C — S-video
- D — Audio in
- E — Microphone
- F — Headphones
- G — Eject buttons
- H — Card reader
- I — Floppy drive
- J — USB 2.0
- K — FireWire® (IEEE 1394) port
- L — Power On/Off

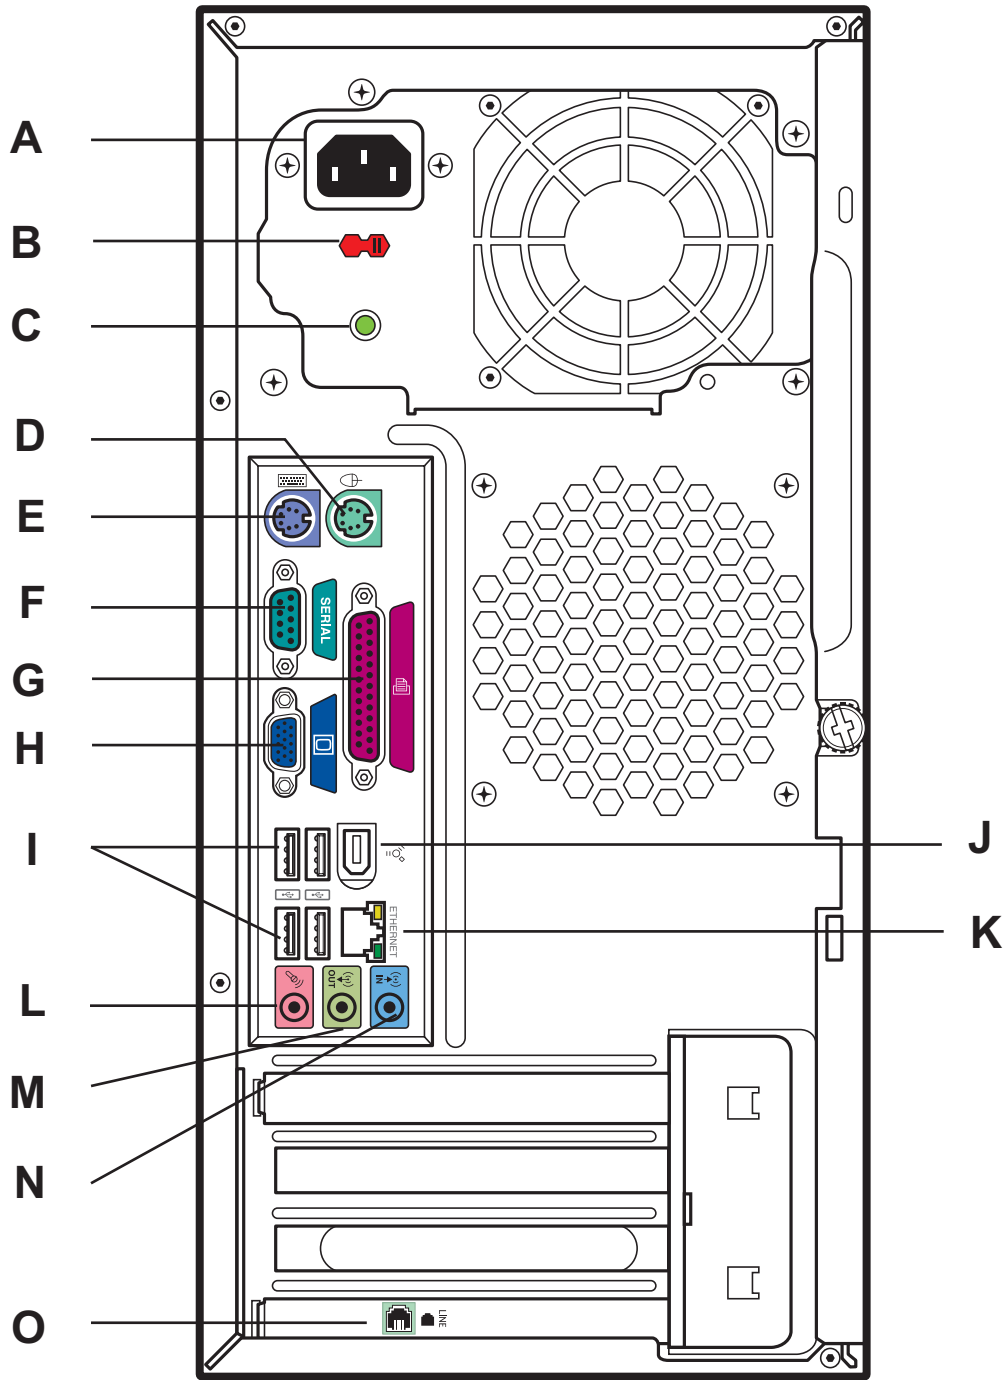

- A — Power Cord connector
- B — Voltage selector
- C — Power LED
- D — PS/2 Mouse connector
- E — PS/2 Keyboard connector
- F — Serial port
- G — Parallel port
- H — VGA Monitor port
- I — 4 USB 2.0 ports
- J — FireWire® (IEEE 1394) port
- K — LAN (Ethernet)
- L — Microphone connector
- M — Audio Line Out
- N — Audio Line In
- O — Modem (Line In RJ-11)

- Select models only:
- P — Digital Audio In
 - Q — Digital Audio Out
 - R — Side speaker port
 - S — Rear speaker port
 - T — Center speaker/subwoofer port

